



---

## writeINFINITY (dry erase paint)

---

### care and maintenance instructions

After the installation of your new WriteWalls dry erase coated surface, please follow suggested cleaning and maintenance instructions for the optimal long term performance of your surface.

#### recommended supplies

---

The use of EXPO® Bullet or Bold markers is recommended. The use of other brands may cause ghosting, and therefore may require more frequent cleaning.

Foam, felt or microfiber cloth-type erasers should be used for optimal performance.

#### maintenance

---

1. Microfiber cloths are recommended as erasers to remove the dry erase markings.
2. Change or clean the cloth often, as they become soiled to avoid leaving excessive marker residue on the surface. Microfiber cloths can be washed.
3. Felt erasers may also be used. Change erasers often.
4. The use of dirty cloths and/or erasers will spread ink around the surface. As needed, rinse the surface with water and dry with a clean towel.
5. All wall surfaces should be cleaned once per week with water and/or dry erase cleaner to ensure long term performance.
6. Mr. Clean Magic Eraser products can be used if necessary.
7. **All cleaning products should be rinsed clean from the surface with fresh clean water after use.**

#### long term care

---

Do not use abrasive cleaners/cleaning tools, erasers with hard plastic edges/housing or pointed writing instruments on the dry erase surface.

Should permanent marker be used on the surface, it is recommended to write over the area with an EXPO® Bullet or Bold marker, erasing and then cleaning the balance with the use of isopropyl alcohol swabs. We cannot guarantee the full removal of permanent marker, as time plays a key role in how well it can be removed from the surface.